

800-663-3412



www.afcindustries.com

# Motor-Control for MaxFlex Series

---

Before starting the system, please carefully read this manual and keep it safely for future reference.

[Info@afcindustries.com](mailto:Info@afcindustries.com)

13-16 133rd Place, College Point, NY11356 • Phone: (718) 747-0237 • Fax: (718) 747-0726

## Contents

<b>CONTENTS</b>	<b>2</b>
<b>SAFETY</b>	<b>3</b>
<b>CHARACTERISTICS AND FUNCTION</b>	<b>3</b>
<b>INSTALLATION AND STARTING UP</b>	<b>3</b>
<b>OPERATION</b>	<b>5</b>
<b>Handset</b>	<b>5</b>
<b>Drive 1 Up / Down</b>	<b>5</b>
<b>Drive 2 Up / Down</b>	<b>5</b>
<b>Saving of a Position</b>	<b>6</b>
<b>Moving to a Saved Position</b>	<b>6</b>
<b>Power fail</b>	<b>7</b>
<b>SETTINGS</b>	<b>7</b>
<b>Setting of indicated Height</b>	<b>7</b>
<b>Travel Limit Setting</b>	<b>7</b>
<b>EXTENDED SETTING</b>	<b>8</b>
<b>Calibration</b>	<b>8</b>
<b>Without adjustment of the indicated height</b>	<b>8</b>
<b>Including adjustment of the indicated height</b>	<b>9</b>
<b>If you have a handset without a display</b>	<b>10</b>
<b>Setting of Number of Drives for Synchronous Operation</b>	<b>10</b>
<b>APPENDIX</b>	<b>11</b>
<b>Water Protection, Cleaning</b>	<b>11</b>
<b>Trouble Shooting</b>	<b>11</b>

## Safety



The safety instructions are to be observed under all circumstances! If the system is inappropriately operated, it might cause danger for persons and objects!

- Any opening and exchange of electronic equipment may be carried out by appropriately trained personnel only.
- In case of malfunction, like e.g. development of smoke or gas, or unusual noises, all system components are to be turned off and unplugged from electrical source.
- The operating time as written on the type plate may not be exceeded.
- Electric supply lines may not be exposed to danger of pinching, bending or tensile stress.
- Modification of the control and operating element is not permitted.
- Components may not be operated in an explosive atmosphere!
- When operating the drive it must be watched that no objects (e.g. furniture) get caught!
- Fastening plates made of metal are to be grounded, res. insulated by the customer.
- Before plugging and unplugging the motor and handset cables, the mains cable has to be disconnected.
- Regarding to EMI standards the length of the motor cables must not exceed 2 meters.

## Characteristics and Function


These synchronous control systems serve for the control of height-adjustable desk systems.

Depending on the type, up to 4 drives can be controlled, which are divided in 2 separate motor groups. The drives of each motor group are controlled synchronously.

Moving up and down are the basic functions of the desk. These two functions can be carried out with all handsets.


Additional functions are: memory function for positions and drive to these positions. For this purpose a handset with position keys is necessary however.

## Installation and Starting Up

 Plug in handset and drives.


### **Type with 2 motors**

An 8-pin DIN socket is provided for each drive.

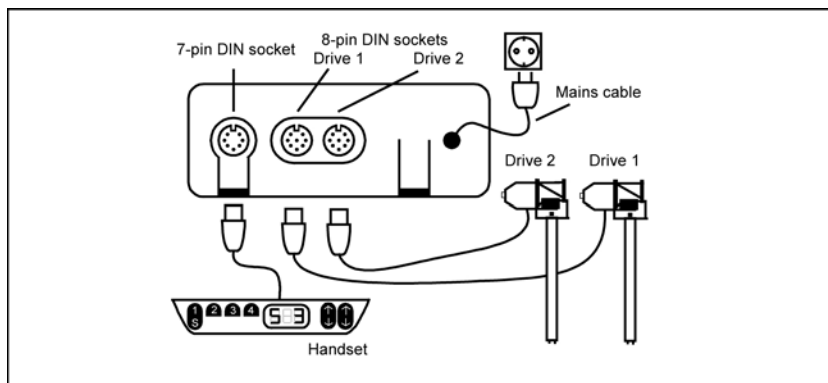



**Type with 3 motors**

An 8-pin DIN socket is provided for each drive.

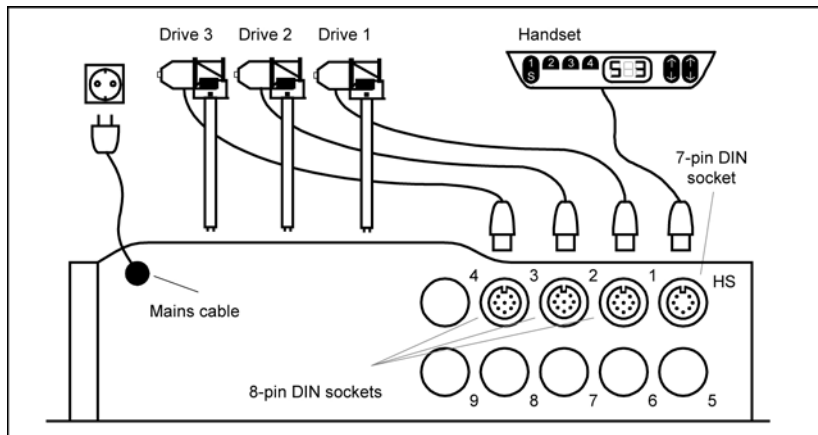**Type with 4 motors**

An 8-pin DIN socket is provided for each drive.

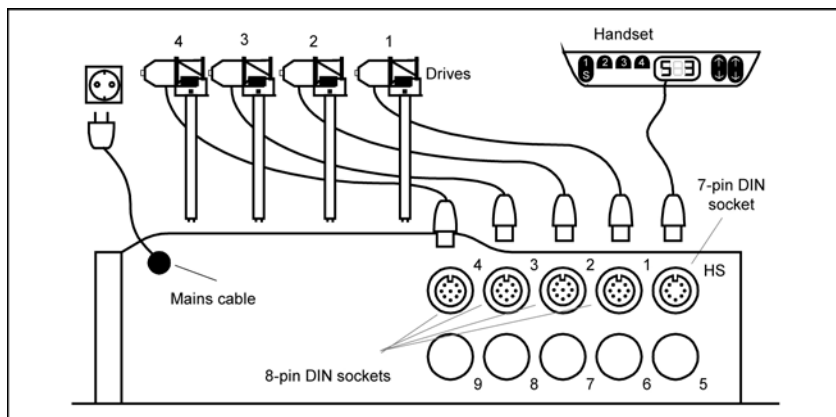



 Plug in mains supply.

**Attention:**

*Before starting the system, please make sure, that the operating voltage of the system conforms with the local power supply.*


The system is operating as soon as the mains supply is plugged in.

 When starting the system for the first time, a calibration sequence must be carried out by qualified personnel. This is only necessary, when the desk has no mechanical limit switches.

 The basic functions of the desk are described particularly in the [Operation menu](#).

## Operation

### Handset

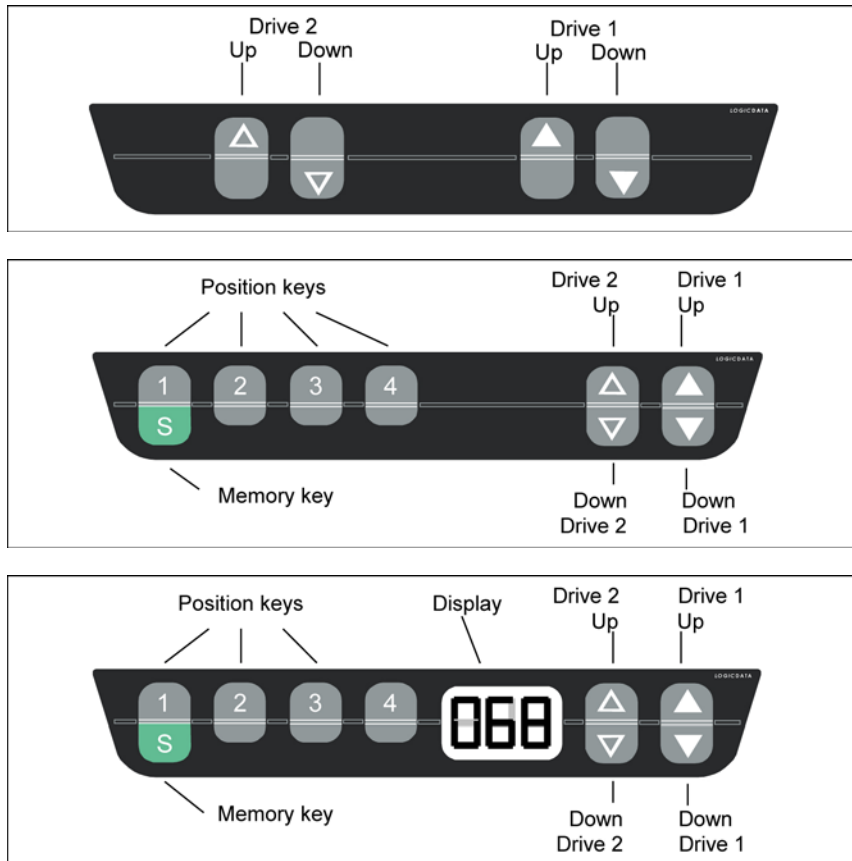

### Drive 1 Up / Down

This function serves for an easy height adjustment of the first tier.

 Press  or .

The key is to be pressed until the desired height of the desk has been reached.

The display always shows the actual height. Example:



The desk moves as long as the key is pressed, or until the end position is reached.



**Attention:**

*The desk stops, if an additional key is pressed.*

### Drive 2 Up / Down

This function serves for the control of the second tier, e.g. for the inclination of the desk or for the monitor.

 Press  or .

The desk moves as long as the key is pressed, or until the end position is reached.

**For the following explanations:**

- The following functions only apply to handsets with position and memory keys.
- All data concerning the display are applicable to the handset with display only.

**Saving of a Position**

This function allows the saving of a certain desk height. 4 different heights can be saved. These saved positions can be set later again. (See moving to a saved position)

**Attention:**

*If the memory key is pressed again, the actual height is indicated and nothing is saved.*



Press one of the keys



After having pressed the position key, a "S" and the number of the position key is read on the display.

Example:



At the end of the memory procedure a double 'Click' is heard and after 2 seconds the actual height is read again.

Example:


**Attention:**

*If the position key is not pressed again within 5 seconds after having pressed the memory key, the actual height is read again on the display and nothing is saved.*

**Moving to a Saved Position**

- If the desk is turned on for the first time, all positions are corresponding with the lower end position.

This function allows the desk to move to a saved height again. There are two functions to move to a saved height:

- Press and hold one of the keys 

The desk moves towards the position as long as the key is pressed. If the key is not pressed anymore, the desk stops.

The first motor group start moving, followed by the second.

- Make a double click with one of the position keys (1-4).

(You can see in data sheet, if the double click is enabled.)

After double-clicking one of the keys, the desk automatically moves to the saved position. The first motor group starts moving, followed by the second.

**Attention:**

*If any other key is pressed while the desk is moving towards the saved position, the desk stops.*


## Power fail

After disconnecting the power source, the first and the second\* tiers have to be moved the lower programmed end position.

\* Depends on settings of the motor control

The display flashes and shows „000“.



By pressing  move to the lower end position of the desk.

The desk moves down with half speed. Moving up is not possible.

After the desk has reached the lower end position, the display shows the actual height and the control box is ready for normal operation.

## Settings


→ If the sequences described below are not observed, the control returns to standard mode again and can be normally operated.

### Setting of indicated Height

With this function the indicated height can be changed.

Press  

→ If the next key is not pressed within 5 seconds, the control returns to standard mode again.


Press  now for about 5 seconds until the display starts flashing.

Example: (display flashes)



Now you can set the height with  or with .

During this procedure the desk does not move.


If the position is correctly set, the new height can be saved by pressing .



The position is saved and the display stops flashing.

The new height is also saved, if no key is pressed within 5 seconds and the display stops flashing automatically.


### Travel Limit Setting

If the desk misaligned, or if you would like to use the set control with another desk of the same type, the lower limit of travel is to be aligned.

Press . Hold this key until the desk has reached the lower end position. The desk then stops automatically.

 Hold .

After about 5 seconds the desk slowly starts moving again until it has reached the absolute limit of travel. The desk stops automatically again.

 Release the key.

Now the desk will not move to the limit stop again and can be operated normally again.

Depending on the settings of the motor control, the second motor group has to be moved to the lower end position too.

## Extended Setting



### Attention:

*These functions must be carried out by qualified personnel only!*

*If the sequences described below are not observed, the control returns to standard mode again and can be operated normally.*

## Calibration

The calibration sequence serves for the setting of the upper and the lower stop position, if there are no mechanical limit switches. The calibration sequence is not necessary, if the desk has mechanical limit switches.

When starting the system for the first time, this calibration sequence must be carried out, as the drive will be damaged if it always drives against the hard stop.

Depending upon the settings of the motor control, 3 types of calibration modes are offered:

- Without adjustment of the indicated height
- Including adjustment of the indicated height
- If you have a handset without a display

### Without adjustment of the indicated height

 Press ,  and  at the same time.

Hold this key combination for about 10 seconds, until "S 0", "S 7", "S 8" or "S 9" is read on the display: Example:





 Press  or  until "S 9" is shown on the display.





 Press  to confirm.



 By pressing  move to the lower end position of the desk.



The control automatically turns off as soon as the end position is reached.



 By pressing  move to the upper end position of the desk.



The control turns off automatically as soon as the end position is reached.



Now one of the following three points can be chosen:

 If you want to save a new end position, press  .  
The control now saves the input data and does not drive against the hard stop any more.

 If you do not want to save any new end positions, but want to keep the old positions, press  .  
The control now finishes the calibration sequence without saving.

 If you want to delete the end positions, press  .  
The control finishes the calibration sequence and deletes the saved end positions.

### **Including adjustment of the indicated height**

 Press  ,  and  at the same time.

Hold this key combination for about 10 seconds, until "S 0", "S 7", "S 8" or "S 9" is read on the display: Example:





 Press  or  until "S 7" is shown on the display.








 Press  to confirm.

The display starts flashing and shows "068".






 By pressing  move to the lower end position of the desk.  
The control automatically turns off as soon as the end position is reached.




 The indicated height can be incremented by pressing  and decremented by pressing  .

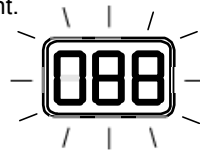

 Press  to confirm the adjusted height.

The display continuous flashing and shows "088".



 By pressing  move to the desired upper end position of the desk.  
The control automatically turns off as soon as the end position is reached.

 The indicated height can be incremented by pressing  and decremented by pressing  .

 Press  to confirm the adjusted height.

The display stops flashing and shows the adjusted height. Example:





**If you have a handset without a display**


(You can see in data sheet, if this calibration mode is enabled.)

 Press .

Hold this key until the desk has reached the lower end position. The desk then stops automatically.

 Hold .

After about 5 seconds the desk slowly starts moving again until it has reached the absolute limit of travel. The desk stops automatically again.

 Release the key.

Now the desk will not move to the limit stop again and can be operated normally again.

In the same way you can calibrate the upper end position. Instead of the key  you have to press .

**Setting of Number of Drives for Synchronous Operation**

With this function, the number of synchronously operating drives can be set. The second motor group will be deleted!






 Press ,  and  at the same time.

Hold this key combination for about 10 seconds, until "S 0", "S 7", "S 8" or "S 9" is read on the display: Example:



 Press  or  until "S 8" is shown on the display.



 By pressing , , , , the number of synchronously operating drives can be set.

**Attention:**

*Never set less drives on your handset than actually existing. The desk system could be destroyed!*

## Appendix

### Water Protection, Cleaning

- The control and the handset may only be cleaned with a dry or with a slightly wet cloth.
- Make sure no liquid gets into the plug-in connection.

### Trouble Shooting

Error	Reason	Corrective Measure
<b>Drives do not work</b>	Control not plugged in	Plug in main cable
	Drive not plugged in	Plug in motor cable
	Insufficient plug contact	Plug in main cable, or cables of handset or of motor correctly
	Defective drive	Contact customer service
	Defective control	Contact customer service
	Defective handset	Replace handset
<b>Drive moves in one direction only</b>	Defective control	Contact customer service
	Defective handset	Replace handset
<b>Control or handset do not work</b>	Control not plugged in	Plug in main cable
	Handset not plugged in	Plug in handset
	Defective control	Contact customer service
	Defective main cable	Contact customer service
	Defective handset	Replace handset
	Insufficient plug contact	Plug in correctly